1x Z-Scale 10x Z-Scale Default Scale 10			
	3D PDF OPERATION		
Clicked inside the window to activate 3D view	The inquiry tool in the bottom left has 4 functions:	Any view can be printed	
	- Pull coordinates and elevation		1
Hold the mouse button and move mouse to pan and tilt view	- Pull distances	See the model tree layers on far left to toggle models	1
	- Pull angles	(must have 3D window active)	Job N
Use the mouse wheel to zoom	- Pull azimuths and percent slopes		File n
Use the mouse wheel to zoom	- Pull azimuths and percent slopes		File

LiDAR Elevatio		
	.2272 ·2250	
	-2200	
	-2150	
	·2100	
	·2050	
	-2000	
	-1950	
	·1900	
	·1850	
	·1800	
	·1750	
	·1700	
	1657	



WWW.PDF3D.COM

3D INTERACTIVE PDF DEMO

FIELD EXHIBIT FOR VISUAL REFERENCE ONLY

No.:

Drwn:

name:

Date: